

NOTICE DE MONTAGE



SABOT MOTEUR ERMAX ADAPTABLE SUR KAWASAKI Z800 / Z800 E 2013 → ∞ Durée estimée de montage : 30mn

Kit de fixation

- 3 vis BHc grosse tête 6x10 noir
- 4 vis BHc grosse tête 6x30 noir
- 4 silent blocks
- 3 pattes de fixation

Montage

- Fixer les pattes (sans les bloquer) comme indiqué sur les photos ci-dessous, en utilisant les points de fixation d'origine. Utiliser les 3 vis 6x10. La patte de fixation côté droit se fixe côté extérieur.

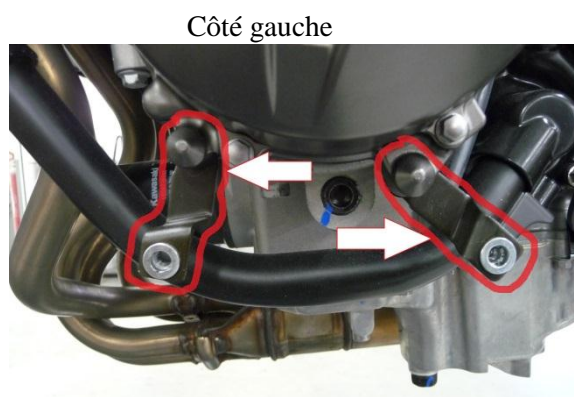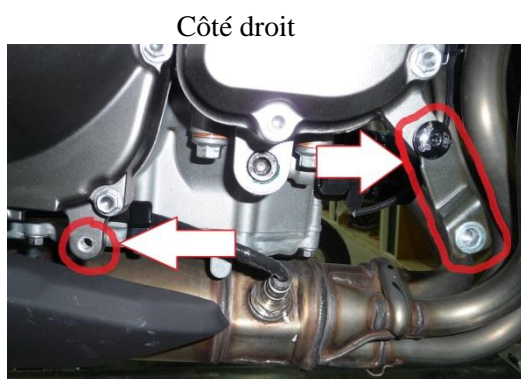

- Retirer les entretoises acier des silent blocks fournis. Insérer les silent blocks caoutchouc sur le sabot, puis réinsérer les entretoises acier. La partie plate en acier se positionne à l'extérieur du sabot. Monter le sabot sur la moto à l'aide des 4 vis 6x30.
- Vérifier le bon positionnement du sabot en jouant sur l'inclinaison des pattes de fixation. Une fois bien centré, démonter le sabot pour bloquer les pattes de fixation, puis remonter le sabot.

Une fois monté, le sabot ne doit avoir aucun contact avec le moteur et doit être suffisamment éloigné de la ligne d'échappement. Il peut être nécessaire de modifier légèrement les angles des pattes de fixations pour ajuster l'accessoire à chaque moto (ne pas plier les pattes de fixation quand elles sont montées sur le sabot).

« ATTENTION »

- * Les pièces peintes et vernies ne sont pas garanties contre les lavages vapeur « haute pression » ou les produits nettoyants agressifs qui peuvent les endommager et décoller le vernis. Nous conseillons d'ailleurs, d'après les données techniques de nos fournisseurs en peinture, d'attendre un mois afin d'obtenir une polymérisation complète du vernis.
- * Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.
- * Les accessoires Ermax sont conçus pour des montes d'origine. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.
- * En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.
- * Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.
- * Les sabots ne seront ni repris ni échangés en cas de frottement lors d'une conduite "sportive", ou lors du franchissement de trottoirs, dos d'âne ... Le montage des accessoires Ermax est prévu pour une **utilisation routière normale**.
- * Déplacer toute durite pouvant couler à l'intérieur des sabots. Toute casse due à des **écoulements de produits corrosifs** n'est pas garantie.
- * Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.

FITTING INSTRUCTION



ERMAX BELLY PAN
TO FIT KAWASAKI Z800 / Z800 E 2013 → ∞
Estimated fitting time : 30mn

Fitting kit

- 3 screws BHc big head 6x10 black
- 4 screws BHc big head 6x30 black
- 4 silent blocks
- 3 fitting brackets

Fitting instructions

- Attach the fitting brackets in the original mounting points using the 3 screws 6x10, but do not tighten (see photos below). The right hand bracket should be fitted on the outside.

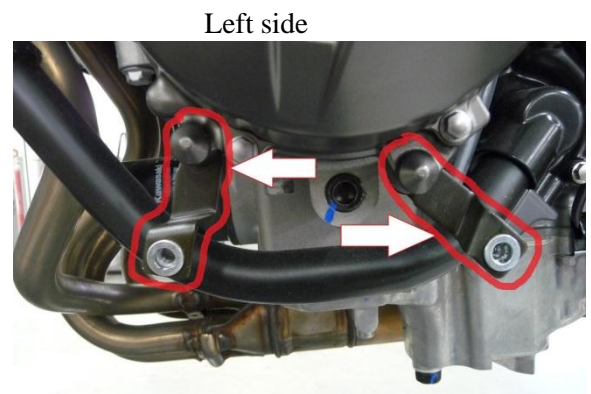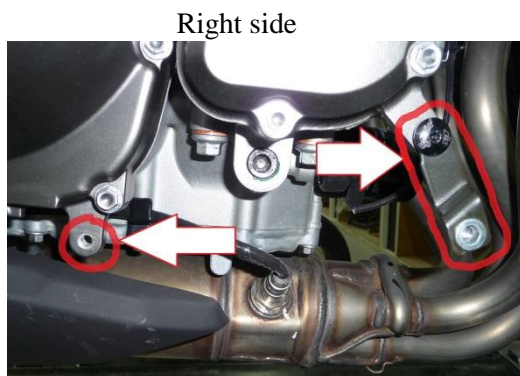

- Remove the steel spacers from the silent blocks provided. Insert the rubber silent blocks on the belly pan and then replace the steel spacers. The flat steel part should be placed on the outer side of the belly pan. Screw the belly pan on the bike using the 4 screws 6x30.
- Check that the belly pan is correctly positioned and then adjust the slop of the fitting brackets if necessary.
- Once the belly pan has been centered, remove it in order to fully tighten the fitting brackets, and then return it to the bike for the final fit.

Once the belly pan has been fitted, you will need to check that it is not touching the engine and there should be sufficient distance between the belly pan and the exhaust pipe. Slight modification to the angle of the fitting brackets may be necessary to ensure a correct fit for your particular bike. (The fitting brackets should never be bent once they have been fitted to the belly pan).

« CAUTION »

- * Painted and varnished parts are not guaranteed against high pressure steam washes or aggressive cleaning products which can damage them and unstuck the varnish. We advise moreover, according to the technical data of our painting suppliers, to **wait one month** to obtain a complete polymerization of varnish.
- * Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- * Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- * Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustments to fit.
- * The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.
- * Belly pans will be neither retaken nor exchanged in case of rubbing during a "sports" driving, or during the clearing of pavements, uneven road surfaces ... The fitting of Ermax accessories is planned for a **normal road use**.
- * Move hoses so that they do not fall inside the belly pans. Any deterioration due to flows of corrosive products is not guaranteed.