

NOTICE DE MONTAGE

SAUTE-VENT & TÊTE DE FOURCHE ERMAX ADAPTABLE SUR MT07 2018/2020

Durée estimée de montage : 15 min

Kit de fixation


- | | |
|-------------------------|----------------------------------|
| - 2 vis BHc 6x35 noires | - 1 support en aluminium |
| - 2 vis BHc 6x20 noires | - 4 inserts caoutchouc Ø5 larges |
| - 4 vis BHc 5x25 noires | - 4 rondelles plastique Ø5 |

Montage

- Démontez les 4 vis d'origine sur la tête de fourche (photo ci-dessous).



- Positionner le support en aluminium sur la tête de fourche à l'aide des 2 vis 6x20 et des 2 vis 6x35 comme ci-dessous et le serrer :

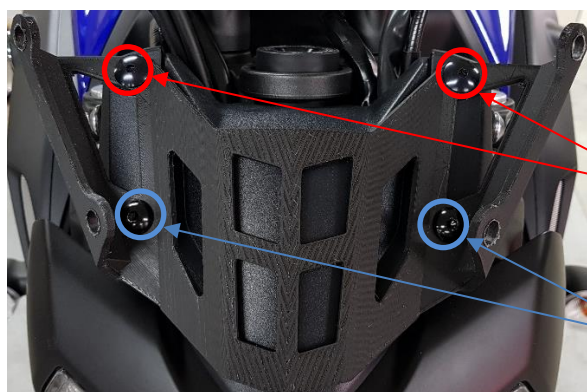

Vis BHc 6x20 noires

Vis BHc 6x35 noires

- Placer les 4 inserts caoutchouc Ø5 larges sur le support en aluminium Ermax aux 4 emplacements restants.
- Monter le saute-vent Ermax sur le support en aluminium et le fixer à l'aide des 4 vis BHc 5x25 et des 4 rondelles plastique Ø5. Ajuster la position du saute-vent sur le support puis serrer le tout.

« ATTENTION »

* Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.

* Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.

* En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.

* Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.

* Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.

* Les bulles abîmées par un **lavage inadéquat** ne sont pas garanties (dissolvant, essence, détergent, produits abrasifs, corrosifs...). Essuyer immédiatement les liquides de frein ou de batterie qui pourraient déborder sur les accessoires.



FITTING INSTRUCTIONS

ERMAX NOSE SCREEN & NOSE FAIRING ADAPTABLE ON MT07 2018/2020

Estimated mounting time: 15 min

Fitting kit


- | | |
|---------------------------|----------------------------|
| - 2 screws BHc 6x35 black | - 1 aluminium support |
| - 2 screws BHc 6x20 black | - 4 wide rubber inserts Ø5 |
| - 4 screws BHc 5x25 black | - 4 plastic washers Ø5 |

Fitting instructions

- Remove the 4 original screws from the holder that maintains the headlight (photo below).



- Place the aluminium support on the original holder with 2 screws 6x20 and 2 screws 6x35 as shown below and tighten:

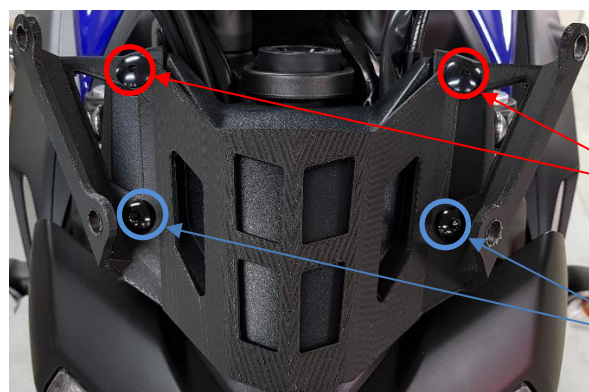

Screws BHc 6x20 black

Screws BHc 6x35 black

- Place the 4 wide rubber inserts Ø5 on the Ermax aluminium support at the remaining 4 locations.
- Place the Ermax nose screen on the aluminium support and fix it thanks to the 4 screws BHc 5x25 and the 4 rubber washers Ø5. Adjust the nose screen position on the holder and tighten everything.

« CAUTION »

- * Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- * Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- * Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustments to fit.
- * The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.
- * Care to excessive clampings which may damage or break our plastic accessories and aluminium screws.
- * Screens damaged by an **inadequat washing** are not guaranteed (abrasive, corrosive ... products, solvent, thinner, benzine ...). Wash immediately brake or battery fluid which may flow on accessories.